



# Installation Instructions

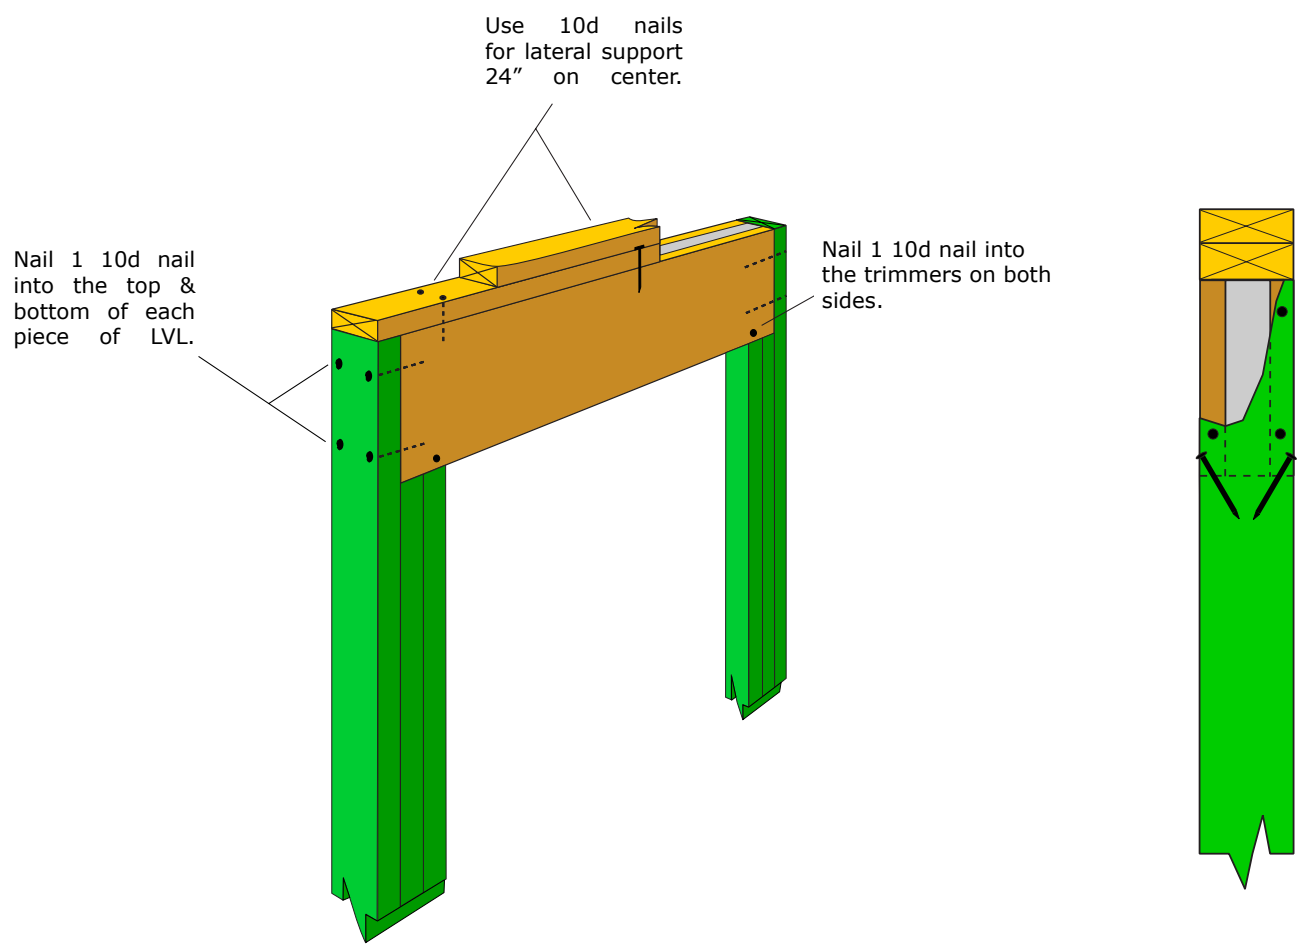

Lateral Support required along top edge of each ply. Use 10d nails 24" on center maximum

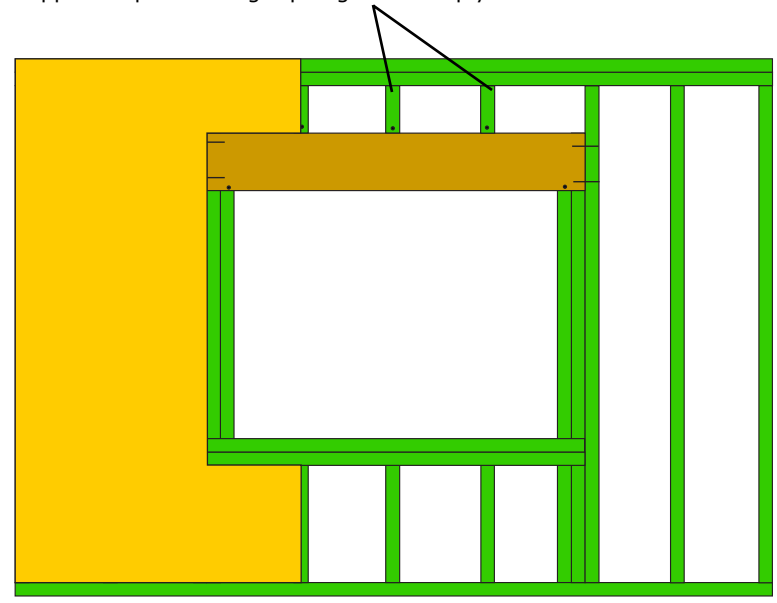

Nail for lateral support at bearing as indicated. Use 10d nails.